



GoMax Camera Compatibility List (Wi-Fi Control)

Table with columns: Brand, Camera Model, Control Type, Capture Photo, Start/Stop Recording Video, Switch Photo/Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Aperture Adjustment, Shutter Speed Adjustment, Half Press To Focus, Full Focus, Digital Zoom Control, Camera Version, HDR Version Info, Remark. Rows include brands like Sony, Canon, Panasonic, Fujifilm, and others.

Note: "1" = "1" Means Support this function, "x" Means Do not Support.

GoMax Camera Compatibility List (Cable Control)

Table with columns: Brand, Camera Model, Cable, Capture Photo, Start/Stop Recording Video, Switch Photo/Video Mode, ISO Adjustment, EV Adjustment, WB Adjustment, Aperture Adjustment, Shutter Speed Adjustment, Half Press To Focus, Full Focus, Digital Zoom Control, Camera Version, HDR Version Info, Remark. Rows include brands like Sony, Canon, Panasonic, Fujifilm, and others.

Note: "1" = "1" Means Support this function, "x" Means Do not Support.

1. For the Sony Camera with Multi Port, you can Type-C to Multi release cable to control Sony camera but not charge. Use Type-C to Micro USB release cable to control Sony camera but not charge.